

Check the Capture Mode

1. Check the mode on the Remote Control before starting to capture media. We recommend using the video mode.

Use the Mode button to cycle through modes if necessary.

Position the Camera

Check the position and orientation before filming.

1. Make sure the camera is level and at the correct height.
2. Ensure that the important aspects of what you want to capture are towards the centre of one of the four cameras

Start Capture

1. Check Remote shows 4 Cameras before pressing capture button.
2. Press capture button to capture media.

Stop Capture

1. Check Remote shows 4 Cameras before pressing capture button.
2. Press capture button to capture media.

Turning off the cameras

1. Press and hold the Start/Mode button on the remote.
2. Check that all 4 LCD displays are off.
3. Press and hold each camera's Wi-fi button in turn.
4. Check that all 4 blue lights are off.

Transferring files to the Edit System

Plan filming carefully, considering the potentially long transfer and processing times required for large amounts of media.

1. Carefully remove the SD card from camera 1 and insert into the first card reader in the USB Hub provided.
2. Repeat with cameras 2, 3 and 4
3. Switch on your Mission Edit system and connect the USB hub.
4. Use [Media Mover](#) to transfer your files from the SD cards to the external media drive provided

Recharge the cameras

Recharge the batteries to ensure they are ready for use




MC4 - Quick User Guide

Mission Cam is a compact high resolution 360 degree panoramic camera housing.



Preparation

1. Ensure the SD Cards have sufficient space to accommodate your next filming session
2. Correctly insert the SD Card in each camera in turn
3. Ensure the camera batteries are fully charged prior to filming (including any extra batteries as required)
4. Ensure the lenses are clean

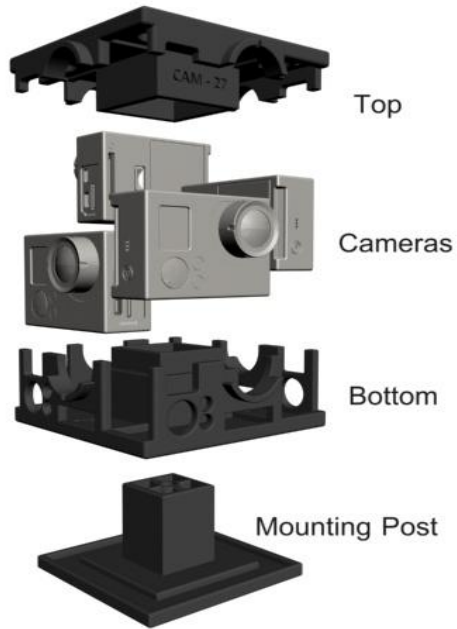

Assembly


!! It is of **critical importance** that the GoPro cameras are **inserted** into the Mission Cam 4 housing in the **correct order**. !!

Failure to ensure this will result in poor image alignment at a later stage.



1. Match the number on the front of each GoPro camera with the corresponding number on the Mission Cam 4 housing base.
2. Fit the Mission Cam 4 housing top - ensuring the arrow lines up with camera 2
3. Secure the housing top with the knurled screw provided

GoPro Hero 3+ Cameras

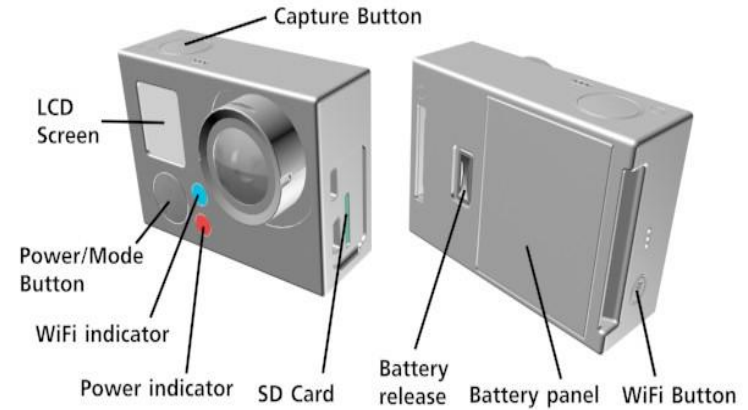

Power on the Cameras

1. Press all 4 power buttons in turn
2. Check the battery bars on each camera LCD display to ensure full charge.

Turn on the WiFi

1. Press all 4 Wi-fi buttons in turn.
2. Check that all 4 blue lights are flashing.

Turn on the Remote Control

1. Turn on the remote control.
2. Check the battery level on the remote to ensure full charge
3. Check that all 4 cameras are connected.

